







ADVANCED SHOWERS INTERNATIONAL LIMITED

32 Frederick Sanger Road, Guildford, Surrey, GU2 7YD. Tel: 01483 295930 Fax: 01483 295935 Email: sales@advanced-

## Optional legs & access panel fixing brackets

Components			
			
Steel Legs x 4*	Fixing Bracket x 2*	Magnetic Strip x 2*	25mm Screw x 4*

\*For 1250 models an additional fifth steel leg, a fixing bracket, a magnetic strip and screws provided with the shower cabinet.

Please note that the illustrations in these instructions relate to the 800W model.

### Assembly Instructions

The optional legs and access panel fixing brackets are fitted before installation of the shower cabinet.

Turn the base section over onto its back (a) onto a clean surface. (Base shown after legs fitted).

Unscrew the adjustable feet and bolts (17mm spanner) from all of the leg fixing plates and keep for re-use.

Fix the leg brackets firmly to the fixing plates with the bolts and screw the adjustable feet into the bottom of each leg (b).

Fix the access panel brackets to the pre-drilled pilot holes in the baseboard where shown using the 25mm screws provided. Place a magnetic strip onto both of the access panel brackets (c).

Carefully turn the base section back over onto its legs.

When the shower cabinet has been installed and tested slide the access panel into place under the shower cabinet. DO NOT remove the protective paper from the magnetic strip at this stage.

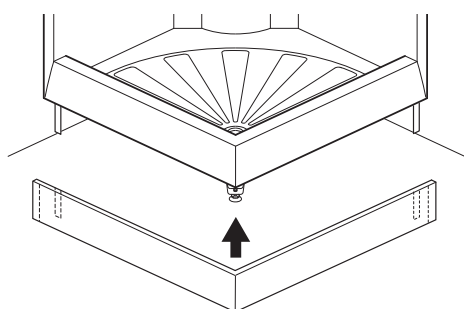
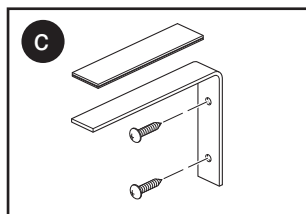
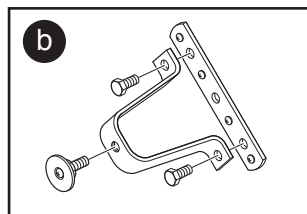
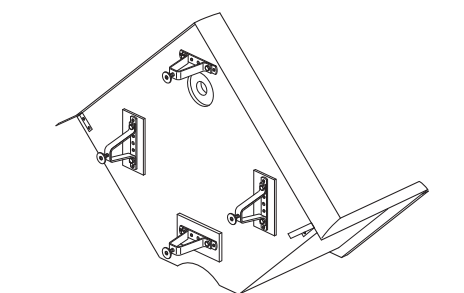
If necessary cut the access panel to length by trimming an equal amount from each end using a fine toothed saw.

Ensure the rear face of the access panel is clean and dust free. Remove the backing paper from the face of the magnetic strips (with strips attached to the access panel brackets). Carefully position the access panel onto the adhesive strips. Hold firmly in place for a few seconds to ensure good adhesion (d).

The optional legs are bolted to the underside of the shower cabinet to raise the cabinet off the floor. The adjustable feet are fixed onto the legs.

The access panel fixing brackets are screwed into the pilot holes in the baseboard to take the optional access panel once the shower has been installed.

(see full instructions for fitting the access panel included with the shower cabinet).



www.userview.co.uk